## Foot sled install instructions

Online copy of these instructions is also available at: https://acculongrange.com/product-install-instructions-and-guides/

## Package includes:

- 1 set of V4 Foot sleds
- Allen key 2.5mm

Installation

- **Tools required:**
- needed
- Thread locker if

ng Range irange.

- 1. Undo the 4 bolts holding each outer cover.
- 2. (a) Put the bolts into the bolts holes of the outer part and (b) put the foot of the bipod into the larger part with the foot sled.
- 3. Screw in BUT DO NOT TIGHTEN the vertical bolts first and then the upper bolts second.
- 4. Slowly tighten the bolts to ensure that the sled has enough hold/grip on the bipod foot to stay in place, But can also still be rotated into place for when you are shooting up hill of downhill. This rotation will help you keep the sled parallel with the surface you are shooting from.

## Maintenance

Overtime the bipod feet will bed into the foot sleds and will need a slight re-tighten. Do don't over tighten

Keep an eye on the bolts becoming loose and use a light weight thread lock (Locktite) if you find them loosening.







